


Fendt IDEAL



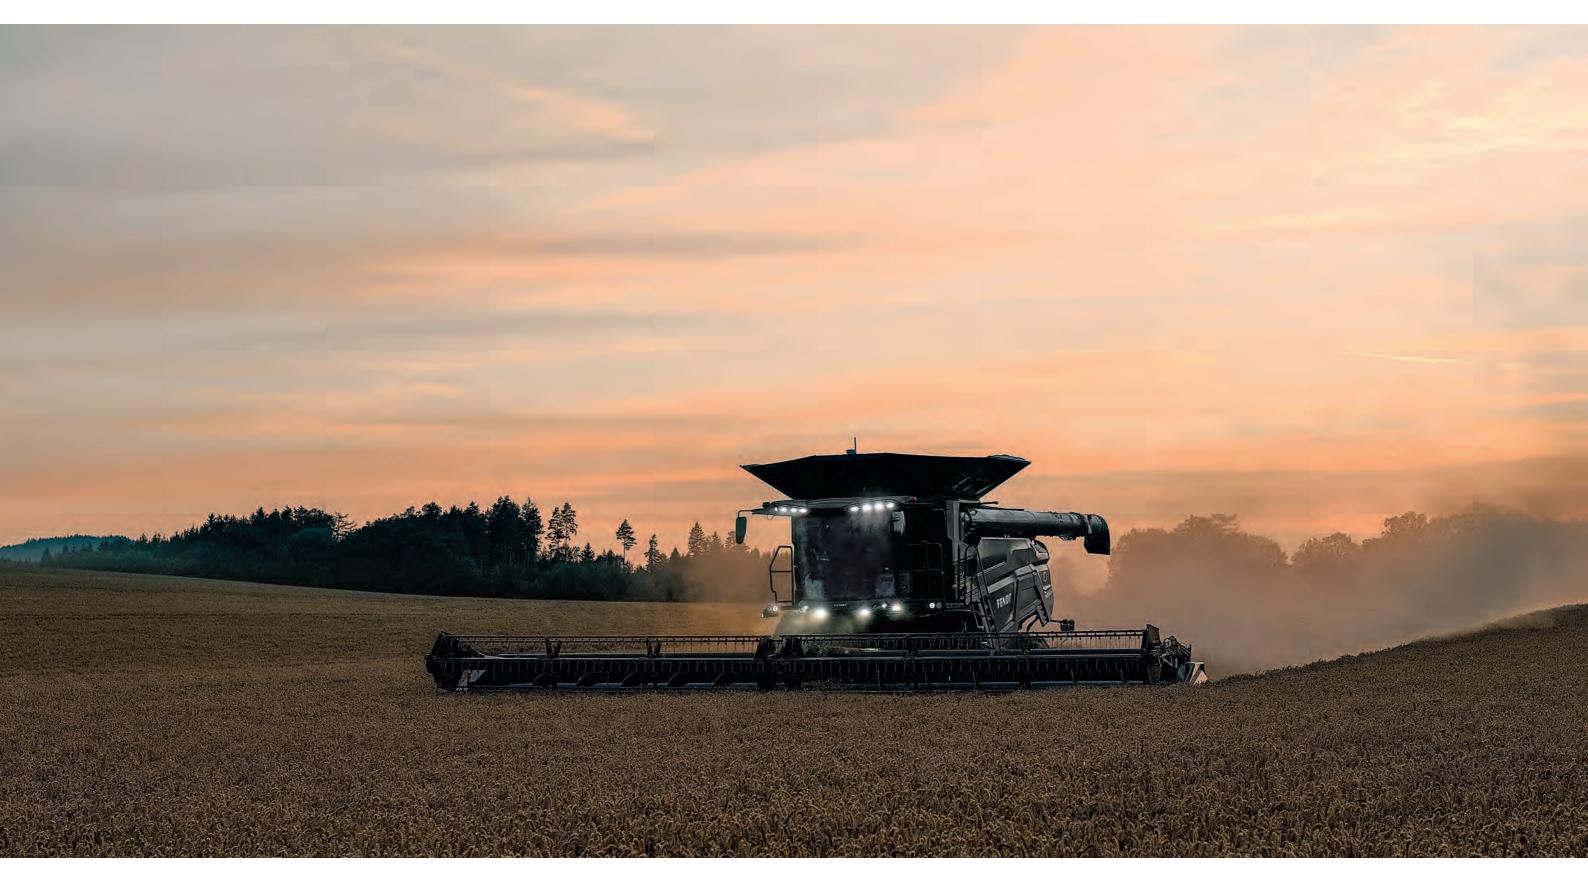

Fendt IDEAL. Time for something completely new.

Fendt IDEAL. A machine that works wonders in the shortest harvest windows with uncompromising quality and unconditional reliability. A smart solution that lets you experience your harvest like never before, with the latest sensors and smart networking.



Models	IDEAL 7	IDEAL 8	IDEAL 9	IDEAL 10
Standard				-
ParaLevel				-
TrakRide				

More power, more output, more comfort. It's time for new dimensions.

Exceptional conditions require exceptional performance – both from us and our machines. A clear view of the cutter unit and in-feed with easy ergonomic steering. IDEALdrive brings ergonomics and efficiency to your working day.

New harvesting horizons.

The Fendt IDEAL was developed from a blank canvas. In this redeveloped high-performance combine, all the assemblies have been radically reinvented. The brief was simple: It must be IDEAL.

- Helix processor
- IDEALbalance™ dual grain pans
- Streamer 210 grain tank with up to 17,100 I capacity and 210 I/s discharge rate
- Streamlined chassis for wide tyres, ideal for the roads
- Wheel or TrakRide chassis
- ParaLevel version with 14% slope compensation
- DriveCenter: Efficient and compact drive
- Vision Cab for the ultimate in ride comfort
- IDEALdrive for a perfect view and ideal seating position
- IDEALharvest $\ensuremath{^{\mathrm{M}}}$ for automatic real time machine setting





Regardless of where or what you harvest: The harvest becomes IDEAL with Fendt.

Redefine your harvest.

The Fendt IDEAL was developed in the global AGCO Centres of Excellence for harvesting technology. Countless farmers and contractors from around the world were asked what combine requirements would make their IDEAL harvest.

It's the culmination of this customer input, the combined experience of our developers and the chance to test the Fendt IDEAL all year round in different regions under the harshest operating conditions, that make the Fendt IDEAL the most modern and innovative combine on the market.

FENDT IDEAL: CUTTER

IDEAL all the way.

The perfect cutter unit

Ideal combines are ready to handle flexi headers, Drapper headers as well as maize headers for 25ft to 50ft.

Always in the right position

With TerraControl[™] table guidance you have perfect control over the widest attachments. TerraControl™ guides the attachment fully automatically at a perfect distance from and perfect inclination to the ground, working together with various functions you can use for the best results. This includes work height adjustment, resetting, ground pressure, various pre-selectable cutting heights, lifting when reversing, reel speed, positioning and headland management – everything fully automatically.

Powerful hydraulics

The lift cylinders on the Fendt IDEAL combine also provide easy clearance even with wide and heavy attachments. On the IDEAL 7 and 8 the cylinders measure 85 mm in diameter and can lift up to 5 tonnes. On the high-end models, IDEAL 9 and 10, the cylinders measure 92 mm in diameter and can lift up to 6.5 tonnes. The lifting design gives a maximum ground clearance of 1270 mm in the up position. Two cylinders on the crop elevator compensate for tilting. They respond quickly and precisely to changing surfaces and compensate up to +/-8°.







The reel height can be automatically adjusted in combination with all attachment functions for perfect crop pickup. FENDT IDEAL: CROP ELEVATOR

The right connection for highest output.

Direct feeding

The Fendt IDEAL models 7 and 8 have three feed chains in the crop elevator. Fitted with 4 feed chains, the output is even higher with the IDEAL 9 and 10. The front feeding drum is closed on all models. This pays dividends when corn threshing due to the gentle grain handling. The chain tension and height can be adjusted remarkably easily: by turning a shaft, you can switch the height between 50 and 98 mm. The correct tension can be set by the spring pre-load.

Perfect angle

The adjustable attachment cutting angle for the perfect in-feed, especially for warehouse crops. Using the 2 hydraulic cylinders at the bottom of the crop elevator housing, you can set the angle between the crop elevator and the attachment from the comfort of your cab. The angle of rotation is close to the front feeding drum, so the transfer from the attachment to the crop elevator is not affected.

Uncompromising drive

The Fendt IDEAL provides the best power for all available attachments. As well as a fixed cutting speed, you can also choose from a variable speed and different power settings. Besides zero-loss and high power transmission, the designers have focused on unconditional reliability. With a variable table drive, the two-stage crop elevator is always attached. The speeds of between 250 or 525 rpm allow for tool-less adjustment for better crop quality, especially in dry conditions.

		IDEAL 7	IDEAL 8	IDEAL 9	ID
Lifting cylinder Ø	mm	85	85	92	
Manual +/-3°			•	•	
Hydraulic +/-6°					

Table drive chain	Speed range
100 kW fixed	620 rpm
135 kW fixed	620 rpm
135 kW variable	611-952 rpm
220 kW variable	611-952 rpm





FENDT IDEAL: ROTOR

Superior rotors: Single and Dual Helix.



Thanks to the option of hydraulically reversing the rotors conveniently from the cab, blockages can be easily and ideally cleared.

Bring out the best in yourself

What makes the Fendt IDEAL stand out from other combines is the excellent Single (IDEAL 7) or Dual Helix (IDEAL 8 to 10) processor, providing the highest output and best threshing quality with gentle crop handling and low energy consumption. The (basic) concept of the Helix processor unites the market requirements such as maximum output, best grain quality and low energy consumption with optimum straw quality.

The feed is vital


The RotorFeeder feeding drum with 600 mm passes the crop from below to the rotors, guaranteeing the best threshing results. The RotorFeeder speed is automatically controlled in proportion to the rotor speed – always at 70% of the rotor speed. Because the speed is adjusted to best match the rotor speed and the large transfer area, the straw is kept intact. The RotorFeeder also uses far less power during this process. A constant flow of crop is guaranteed by the optimal transfer.


The Helix Processor: simply unique

All components of the rotors such as the rasp bars and rotor tines are arranged in four rows like a helix. The front part of the rotors consists of 4 rasp bars installed lengthways which loosen the grains from the ears. The baskets below that are available in different designs for the best results in any application. They can be replaced quickly and easily from the side, depending on the application. The gaps between baskets are hydraulically adjusted up to a maximum of 35 mm. The rotor tines are tilted 20° to the rear, which divides the crop into the helix sections and reliably and gently runs it around the rotor. This prevents unexpected load peaks on the rotor and there are no edges for the product to stick to.


Gentle feed, low power requirement

The height of each rotor tine is 140 mm. Perfectly separated grain without damaging the product too much in too confined a space. In turn you get high straw quality and best threshing at low power. The threshing system is also distinguished by its simple configuration. The operator only needs to change the rotor speed range and the concave clearance.

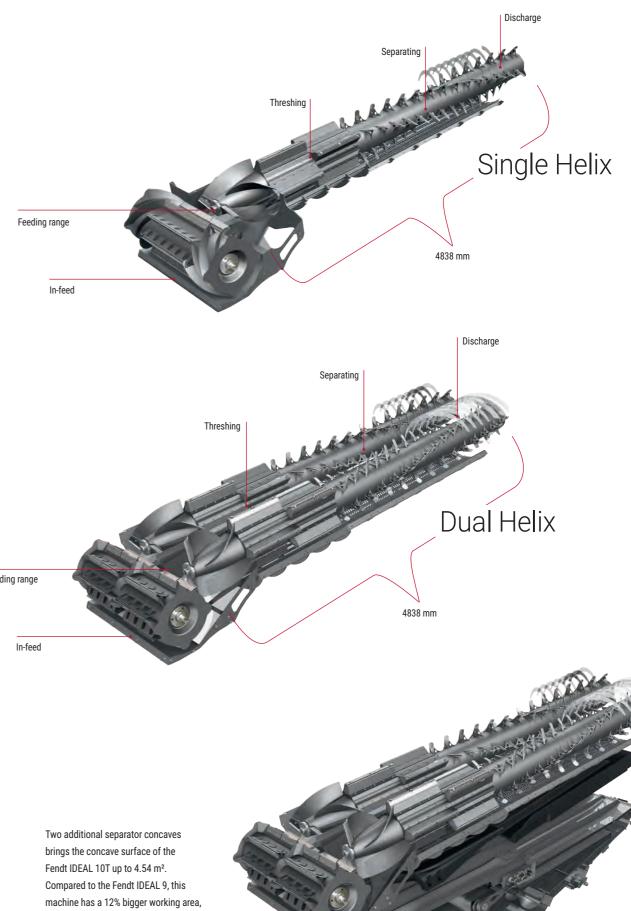

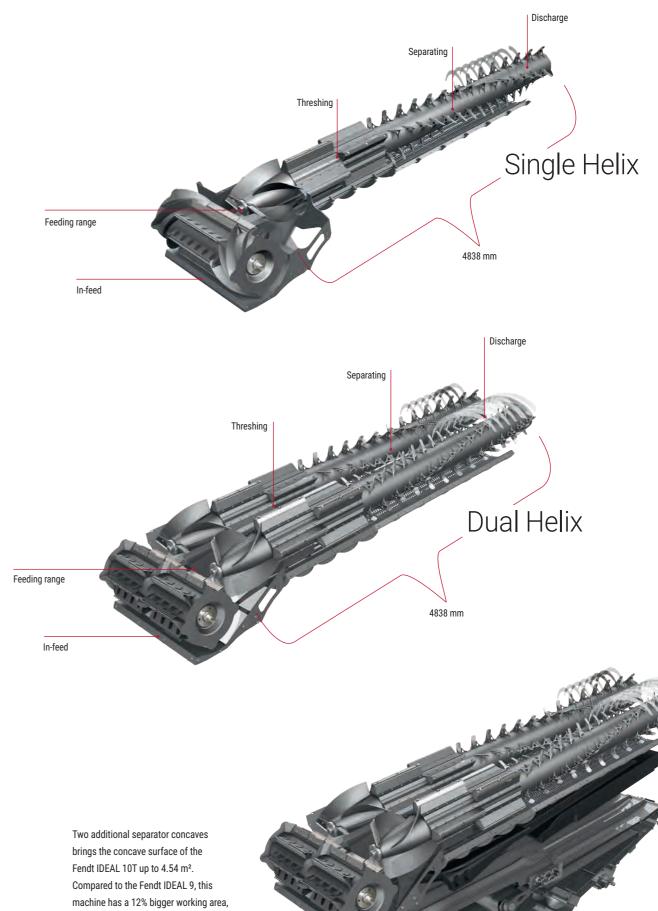

which means even higher separating capacity and even greater output.

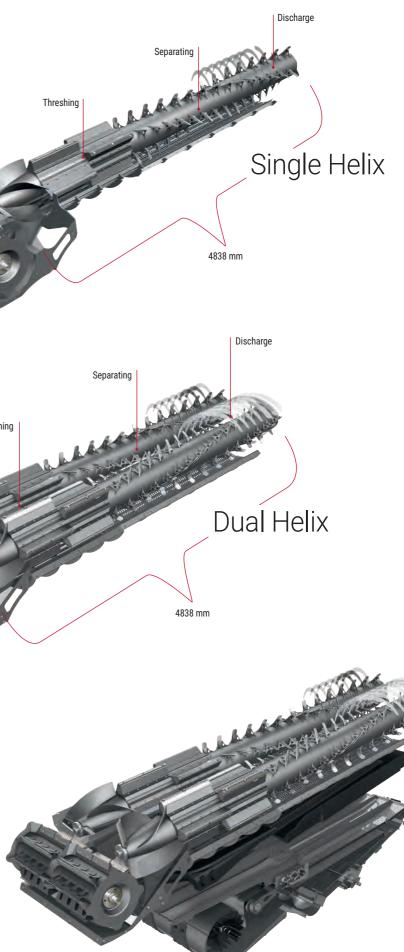

Threshing system		IDEAL 7	IDEAL 8	IDEAL 9	IDEAL 10
Rotors	number	1	2	2	2
Rotor speed	rpm	400 - 920 / 280 - 1160	400 - 920 / 280 - 1160	280 - 1160	280 - 1160

FENDT IDEALHARVEST

Adding a whole new dimension to automation.

Simple visualisation

IDEALharvest gives you an instant view of all the key machine parameters so you can customise your harvesting strategy however you like.

Easy to adjust

IDEALharvest[™]

Happy harvest.

With IDEALharvest, the Fendt IDEAL sets new benchmarks in the field of automated machine settings -IDEALharvest is a revolutionary system that will automate your Fendt heavy-duty combine. Acoustic MAD sensors provide the data required for the Fendt IDEAL to automatically adjust to your pre-selected harvest strategy and achieve the best threshing results.

The driver can quickly and easily select from the 3 key harvesting strategies - minimise breakages, minimise grain loss or optimise grain purity. You can also use the slider to prioritise throughput performance. The Fendt IDEAL's rotor and fan speed, top and bottom sieve openings and forward speed are continually optimised to suit the selected strategy.

IDEALharvest also displays the machine's crop flow in realtime, so you can use the data to assess crop distribution in the machine. Based on the realtime values of the installed sensors, the transfer volumes and grain losses are displayed onscreen. The Grain Quality Cam helps optimise the grain quality.



Quickly and easily apply settings such as rotor and fan speed; the best way to follow your preferred harvesting strategy.



FENDT IDEAL: IDEALBALANCE™

Brilliantly simple. Always in the right balance.

IDEALbalance[™] can minimise the losses on a lateral slope up to 60%, without any complex steering.



Outstanding technology

To ensure that nothing but clean crop lands in the grain tank, Fendt IDEAL models are equipped with the unique and ingeniously simple IDEALbalance™ system. The core of the system is the double grain pan. The front grain pan collects the material threshed out by the rasp bars in the front part and forwards it to the front part of the preparation floor. The rear grain pan collects the material discarded from the rotor tines and sends it backwards to the preparation floor. The makes full use of the preparation floor and the product is well cleaned.

Impervious up to 15%

The front grain pan is concave to gather the material in the middle of the pan. With a Dual Rotor, the rear grain pan is convex, so the crop collects at the outer ends. This distributes the crop in the machine properly in all conditions. On 15% gradients, this straightforward design avoids up to 60% losses compared to flat pans. IDEALBalance™ is built into all Fendt IDEAL models as standard. The IDEAL 7 comes with a special grain pan option, just right for the single rotor.





The front grain pan is concave, in order to channel the material to the middle of the pan.

On single-rotor models (IDEAL 7) the material is collected in the middle by the long grain pan, before being evenly distributed in the front part of the preparation floor.

Thanks to IDEALbalance[™], the crop is evenly distributed across the sieves.



FENDT IDEAL: CLEANING

Full power: Cyclone Cleaning System.

Triple fan

The powerful Cyclone cleaning fan consists of three fan units with open sides for maximum air output. The fan speed can be hydraulically adjusted between 250 and 1400 rpm, to give you different speeds quickly and efficiently. The powerful airflow is split from the first drop stage, with a constant air flow generated over the entire length of the shaker shoe, giving you the best cleaning results.

Separate post-threshing

best possible configuration.

Specially designed returns for maximum performance and the best threshing. The product is threshed out by the auger and passed on to the grain pan. This prevents any separating potential being lost at the processor. Threshing occurs between the auger and the interchangeable covers, which can be serrated or smooth depending on the intensity you want.

Superior cleaning

The long preparation floors, high partitions and the long shaker shoes provide for exceptional cleaning in the Fendt IDEAL. Most short straw and chaff is separated from the grain on the first drop between preparation floor and intermediate floor. The second drop to the top sieve then separates the impurities further. A strong air flow ensures perfect cleaning results. The longest sieves on the market with the fitted partitions mean optimal grain purity. In order to deliver the best results under all conditions, the opening range of the sieves can be conveniently and easily electrically adjusted from the cab.

The IDEAL 10 features curved drop steps. Thanks to the curved shape, the heavy grains gather in the lower part of the step, while the laws of physics mean the lighter parts of the crop flow are in the top section. The curved steps provide a wider air outlet, which can significantly increase the air volumes.





Bring out the best with smart threshing


via the return.



Loss sensors at the end of the shaker shoe help the operator adjust the machine to the best possible configuration, by recording crop which falls to the ground via pressure and acoustics.





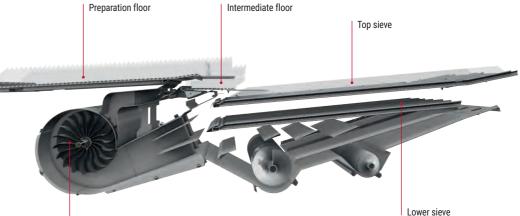





The 4 curved-step sections of the IDEAL 10 can be easily removed for cleaning.

FENDT IDEAL: STRAW MANAGEMENT

ShortCut and ActiveSpread: The cornerstone of perfect chopping.

Ultimate chopping

Even the straw chopper was adapted without compromising the enormous output of the Fendt IDEAL. Every model comes with one of 2 straw chopper versions: The BaseCut with 56 knives across 4 rows, or the ShortCut with 112 knives across 8 rows. Both choppers have maintenance-free bearings. The shearbar can be set to 5 positions without tools. If you want the straw to drop, just use the Fendt IDEAL's 'chop to drop' function and switch to swath shot mode, all from the comfort of your cab.

Ultimate distribution

The chaff spreader is placed directly at the end of the shaker shoe and distributes straw and chaff as desired. The distribution disks are hydraulically driven, allowing variable speeds. Choose between 3 straw distribution settings: chop and mix (chaff into chopper), drop straw and mix (chaff into swath) and separate chaff from straw (chaff distributed sideways). At the end of the straw chopper comes either the ActiveSpread distributor or passive straw deflectors. ActiveSpread works with two hydraulic straw distributors, the speed of which you can adjust from the cab. With the passive straw distributor you have the choice of adjusting the deflector plates wither electrically or manually. The left and right sides can always be set independently.


Best access

The chopper can be swung out using two electric motors for very easy access. The chopper knives, produced by Rekord, can be used from both sides to double the service life. The chopper speed can be easily switched by a belt from 850 rpm (maize, beans) to 3600 rpm (grain, oilseed rape).

The BaseCut straw chopper operates as standard in the Fendt IDEAL with 56 knives.





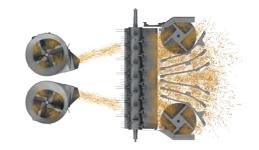


Chop and mix straw

		ShortCut	BaseCut
Knife rows		8	4
Serrated knives	Number	112	56
Counter knives	Number	55	28
Adjustable speeds	rpm	850/3600	850/3600

The 8-row straw chopper ShortCut delivers exceptional straw chopping and distribution on Fendt IDEAL models.



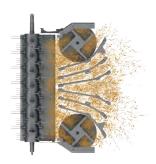

Separate chaff from straw

FENDT IDEAL: GRAIN TANK AND DISCHARGE

Streamer 210: From 17,100 to 0 litres in just 81 seconds.





Volumes of up to 17,100 l in the Streamer 210 unload in around 81 seconds.

Unprecedented discharge speeds

Fendt IDEAL combines come with a choice of 2 grain tank versions. The Streamer 210 with a 17,100 l capacity and a 210 l/s unload rate, or the Streamer 140 with 12,500 l and 140 l/s. The enormous volume and increased unloading rate do justice to the enormous output of the Fendt IDEAL. The key to the enormous speed is the huge diameter of the unloading auger. The large diameter of 480 mm with a few auger flights allows for simultaneous low speeds. Gently and with low power requirements, the grain tank is fully unloaded within 81 seconds.

Hydraulically adjustable discharge rate

The discharge rate can be hydraulically adjusted as standard from the cab on all Fendt IDEAL machines. In doing so, the cover flaps of the auger in the grain tank floor are controlled from the armrest at the touch of a button. Five positions (0%, 25%, 50%, 75%, 100% open) can be activated even when the grain tank is full.

High-performance elevator

The grain tank lift is designed for a throughput of up to 200 t/h. The elevator housing measures 239 mm in diameter. This leaves enough space for high throughput in all crop types. 40 convex paddles ensure maximum performance with gentle handling of the crop.

Efficient transfer

The Fendt IDEAL gives you a choice between a transfer range of 7.6 m, 9.15 m or 10.6 m, measured from the middle of the machine. Both the largest versions can also be collapsed into the transport position behind the combine. A flap is fitted to the end of the transfer screw to prevent unnecessary dribble losses when the transfer process stops. This is automatically opened or closed by a hydraulic cylinder when the transfer process starts and stops, and therefore reliably prevents valuable crop from dribbling away. In order to maintain good transfer efficiency in grass seed threshing, a special grass seed kit was also developed in addition for the IDEAL. This prevents grass seed blockages and allows the grain tank to be fully emptied.







Cover flaps above the augers in the grain tank floor control the discharge speed in five positions.

The large diameter of the discharge auger combines low speeds with high output. This ensures grain guality!

Discharge tube	Collapsible	Streamer 140	Streamer 210
Discharge tube 7,6	-		
Discharge tube 9,15			
Discharge tube 10,6		-	



Fewer and shorter stops for unloading are soon reflected in a greater daily yield - sensors for yield and moisture and a grain quality camera are fitted to the elevator. The data is accurate to 98%, and applied with the VarioDoc ISOBUS standard, live yield mapping and IDEALharvest[™].

FENDT IDEAL: STEERING

Everything at hand! IDEALdrive.

Conventional steering

The steering wheel has been used since the development and production of self-propelled harvesters. In 1893 it was still a new invention,

not commonly used. Today, it's hard to imagine a world without a steering wheel. On a harvester it has its uses, but can also be a burden; the steering wheel restricts your view of the header and the in-feed of the crop elevator. It also encourages an unhealthy posture. With today's lane guidance systems, the steering wheel is almost redundant on a combine harvester. A machine element that is rarely used can seriously restrict our daily work.

Joystick steering

For a better view of the table, the Fendt IDEAL offers a revolutionary concept – IDEALdrive. With IDEALdrive, there is no need for a steering column. Instead of using a steering wheel, you control the combine harvester with a joystick on the left armrest. The left hand steers while the right hand controls the speed. It means you have a great view to the front. The joystick's control and intuitive response are proportional to the driving speed. It's easy and safe to control in every situation. IDEALdrive is optional when you order the TrakRide crawler drive configuration. As a customer, you can choose how you want to drive your machine.

Ergonomic controls

As well as easy steering, IDEALdrive makes various functions very ergonomic to use; the joystick includes buttons for the indicators, dipped/high beam, the horn and the track guidance system. You can pivot the entire armrest backwards, so it's easier to take your seat.

Buttons on the top

The indicator switch is on the top part of the joystick. The buttons are all within easy reach, for great ergonomics





Exceptional view	Ultra easy controls, with 65% less mus
Better view of the table and surroundings	More manoeuvrability on the field
Better control of the infeed	Full control on the road
Everything in sight, day and night	More efficient driving, with 6% more efficient steering

Buttons on the back

On the back are the buttons for dipped/high beam, horn and track guidance.



scle activity

Precise control

Precise steering when manoeuvring and driving straight

Reliable and safe with proportional control

FENDT IDEAL: ENGINE

Maximum performance with very low maintenance effort.

MAN and AGCO Power

To give you the best overall package, the 4 different Fendt IDEAL models also work with 4 different engines, which are perfectly adapted to the potential output of the IDEAL 7, 8, 9 and 10. The maximum fuel efficiency can only be achieved with an engine that is perfectly suited to the potential output. The IDEAL 7 has an AGCO Power engine, while the IDEAL 8, 9 and 10 feature 3 different MAN engines. All engines comply with Emissions Stage V regulations, and are noted for their long service intervals.

Revolutionary AirSense® Cooling


Cooling is a crucial part of ensuring the engines always run efficiently and reliably. AirSense® Cooling was developed for the Fendt IDEAL. The idea is to provide maximum cooling capacity with minimal cleaning effort. AirSense® Cooling consists of a 950 mm reversible fan and a cooling area of 2.7 m². The air is extracted centrally through a radiator grille on the top side of the Fendt IDEAL. Depending on the temperature and time, the fan automatically changes its direction of rotation and reliably fans the cooler. Dirt and dust never impair the cooling performance. This system is so reliable that you can work through an entire season without any manual cleaning effort.

Air compressor

There is an air compressor to clean the machine on a daily basis. This is directly driven by the engine. The maximum pressure is 9.5 bar with a capacity of 60 l. Two air connections, one on the cab steps and one on the access ladder to the engine platform, allow the connection of an air hose, in order to clean the machine easily in the field.

Tank capacity for long work days

The diesel tank and AdBlue tank are located at the rear of the Fendt IDEAL. This also ensures optimal weight distribution. Both liquids can be poured into the tanks via the platform. The capacities are impressive: Up to 1500 I diesel and 180 I AdBlue can be held in the tanks. Combined with the low fuel consumption of the Fendt IDEAL, this means the machine can be operated for extremely long periods. When others stop, you can just keep on harvesting.

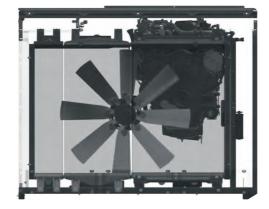


The reverse fan with a diameter of 950 mm turns the vane depending on temperature and time, blowing the intake area clean.



The cooling area is 2.7 m ² and, thanks to AirSense®
Cooling, does not have to be cleaned manually
during the harvesting season.

Model		IDEAL 7 AGCO Power	IDEAL 8 MAN	IDEAL 9 MAN	IDEAL 10 MAN
Displacement	litres	9.8	12.4	15.2	16.2
Max. performance with PowerBoost (ECE R 120)	kW/hp	336/451	401/538	483/647	581/790
Fuel tank capacity	litres	1000 / 1250	1000 / 1250 / 1500	1000 / 1250 / 1500	1000 / 1250 / 1500
AdBlue tank capacity	litres	180	180	180	180

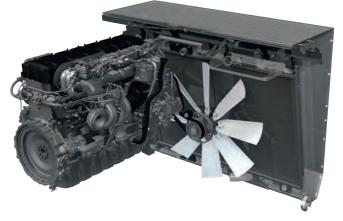

FENDT IDEAL: DRIVE

Making progress and covering large areas was never easier.

Endless propulsion

The Fendt IDEAL ground drive consists of tried and trusted gearbox technology, combined with the latest hydrostatic ground drive technology. Alongside making convenient and efficient progress, reliability is the ultimate benchmark. The ground drive is fitted at the front on the front axle, and can be reached very easily. The brake and differential lock are held directly in the transmission housing. Every model has a differential lock as standard.

Fendt MotionShift

The Fendt IDEAL gearbox offers two gears with a speed range of 0-15 km/h or 0-40 km/h. Fendt MotionShift allows you to shift both gear conveniently during the ride using a button on the armrest. The speed can be easily controlled via the multi-function joystick. In CVT mode, the speed starts at 0 km/h. The IDEAL's acceleration is linked to the joystick position. Enable the unique Hookup mode on the armrest and the Fendt IDEAL reacts proportionally to joystick movements. This makes light work of coupling attachments.

Perfect engine speed

A number of ride strategies are available in order to enhance efficiency and comfort when on the roads. In advanced mode, the engine speed follows your required forward speed, and reduces the speed for maximum efficiency by up to 300 rpm depending on load. In Time mode, the engine speed follows the default. If the speed is however 0 km/h for 5 seconds, the engine speed is reduced to 1/3 of the required value. After 10 seconds, the engine speed falls to the rated engine speed.

Optimal powertrain function

The DriveCenter completely redefines the drive concept of the Fendt IDEAL. All pumps, such as Load Sensing hydraulics or the drive pump, are now directly driven. This means no performance is lost. It powers all the components on the Fendt IDEAL with just 13 belts, one chain and one transmission shaft, while further reducing maintenance and the risk of downtime.





The DriveCenter unit distributes power extremely efficiently across the entire machine, seamlessly powering the Helix processor, cleaning system, cutting unit and hydraulic pumps.

FENDT IDEAL: CHASSIS

Chassis the right impression for the best impression.

Maximum propulsion

fuel and protects the axle.

The IDEAL automatically switches to 4WD mode

pressure of the front axle is reached. This means

on, the AWD is permanently on. When you steer

independently and intelligently only when the adjusted

that the AllDrive axis supports the IDEAL only where

the differential lock turns off, and after the manoeuvre

comes back on again. With this, the IDEAL saves on

necessary to deliver full traction, With the differential lock



The TrakRide crawler drive minimises ground pressure.


Fendt IDEAL TrakRide

On request, the brand new TrakRide track system can be fitted to drive the Fendt IDEAL. This system has been developed in the AGCO Centre of Expertise for track tractors in Jackson, USA. Three track types with widths of 660 mm, 760 mm or 910 mm are available. A hydraulic cylinder is provided for optimal tension. This pushes the front idler forward and therefore tensions the track. The open triangulated suspension allows the track roller to swing 15° up and 10° down, for maximum driving comfort.

Slim mover

The slimline chassis of the Fendt IDEAL combine also allows for large contact surfaces in your wheel selection, with an outside width measuring less than 3.3 m with 800/70R38 wheels. Even Fendt IDEAL combines with ParaLevel slope compensation, which makes adjustments for inclines of up to 14%, can have 800/70R38 wheels on the front axle. This will keep your transport width under 3.5 m.



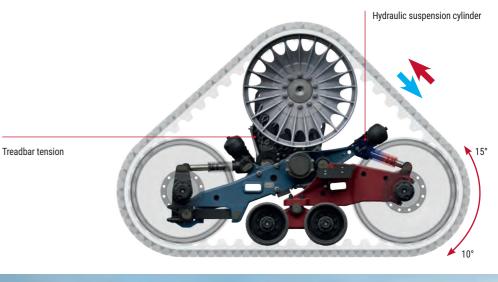



FENDT IDEAL: VISIONCAB

The IDEAL work place with the ultimate in comfort.



The ultimate overview

The Fendt VisionCab was designed to offer you the perfect workplace with the best view over the attachment. It does this with a window area of $5.75\,m^2$ and a 180° panoramic view. The low noise level of just 73 db creates a pleasant working atmosphere. The generous driver's cab means even long-legged drivers can enjoy a comfortable seat.


Seat comfort


On the Fendt IDEAL, you have the choice between two seat variants: the standard fabric variant, or the Deluxe leather seat with active ventilation. The instructor's seat is made of leather as an option. There is a 28.5 litre cooling compartment below it. Fold down the backrest to reveal two practical bottle holders and a document holder.

Everything under control

At the heart of the Fendt IDEAL's simple and intuitive operation is the armrest. It features a handy joystick and the membrane/toggle button for machine functions. There is also a small digital display for the key machine settings. The Varioterminal 10.4" also allows you to easily adjust the machine by tapping

or by pressing a button. For the advanced machine functions of the IDEALharvest™, click your iPad into the stable and practical holder and run the application.

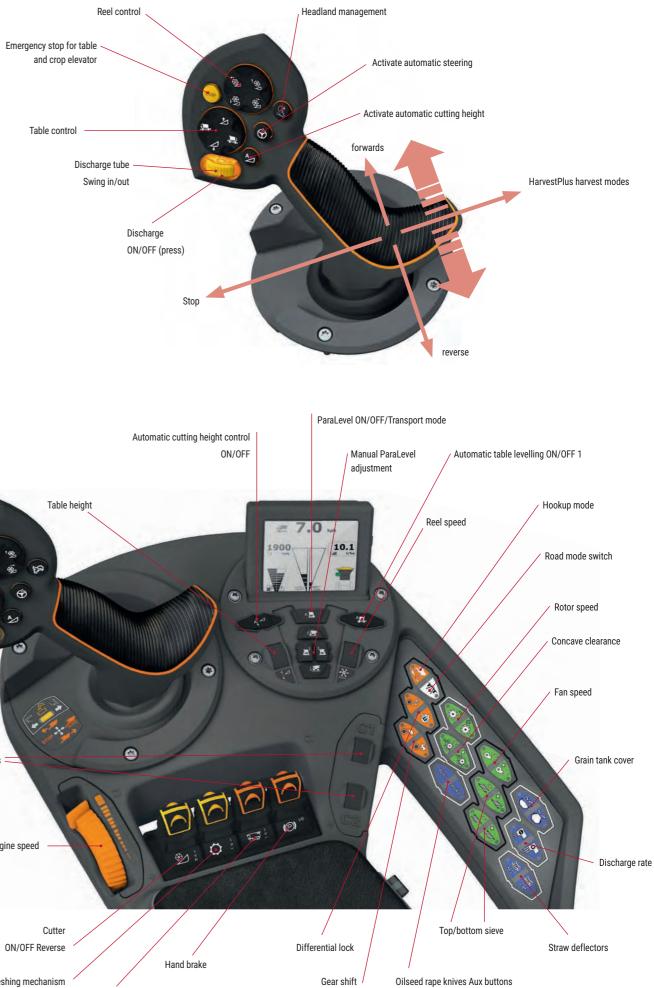

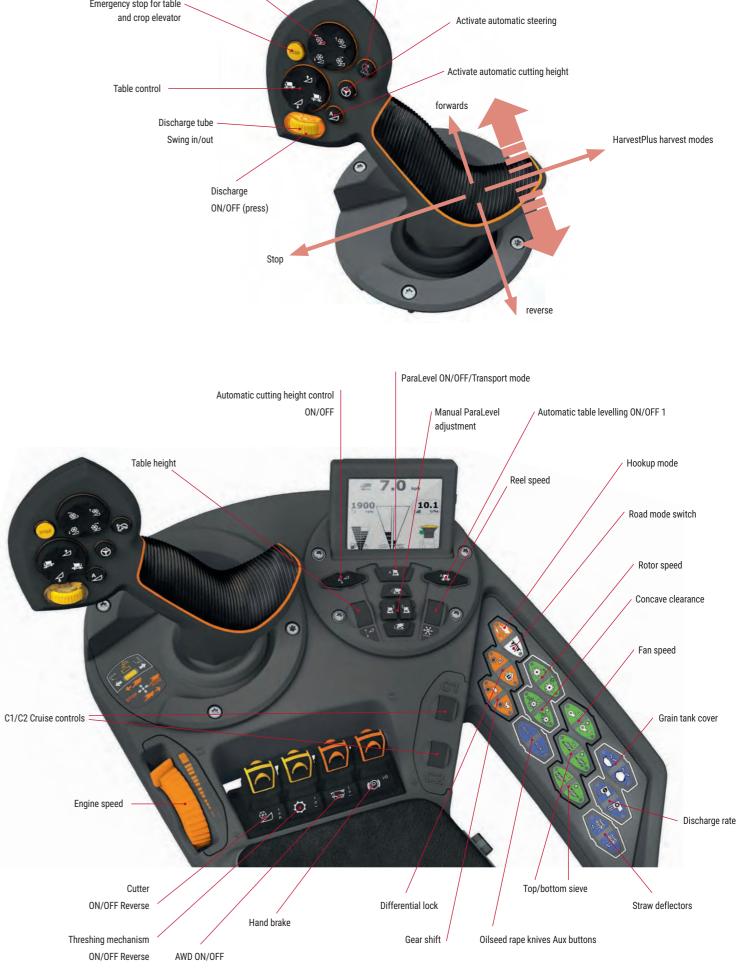

FENDT SMART FARMING

IDEAL solutions for a relaxed harvest.

You have the choice

The Fendt VarioGuide automatic guidance system gives you a choice of different receivers from NovAtel® or Trimble®. Both offer a wide variety of correction signals with accuracies of up to +/- 2 cm. With the NovAtel receiver, the correction signals SBAS, TerraStar-L & C and RTK keep you on track. Choose a Trimble® receiver to use SBAS, RangePoint™ RTX™, CenterPoint RTX™ and RTK. If you lose your RTK signal due to the terrain, VarioGuide continues to work reliably up to 20 minutes thanks to the Trimble®-xFill™ or NovAtel® RTK Assist solution.

Ideal time yield mapping

Thanks to the real time yield mapping of the Fendt IDEAL, the current yield at every position in the field is displayed on the terminal as you work. You can also display the moisture content for that location. The system only works via GPS and the moisture and yield gauges fitted to the elevator.

Easy documentation

With the Fendt VarioDoc and VarioDoc Pro, the work done can be documented with just a few clicks in the Varioterminal, and transferred to your field database. VarioDoc comes with every Fendt IDEAL. The option of VarioDoc Pro offers an extended range of functions, including wireless data transfer. Precise automatic guidance for best results: Fendt VarioGuide makes it possible.







Fendt VarioGuide always gives you a choice. Use the lowcost and effective NovAtel receiver (right), or the Trimble receiver (left) with even more options.

Different correction signals, which allow you to carry on working for a time even if you lose the signal, are available for both NovAtel and Trimble systems.

FENDT SMART FARMING


Your link to the field.

Call up machine data from any location: Fendt Connect

Fendt Connect is the central telemetry solution for Fendt machines. With Fendt Connect, machine data is collected and evaluated, so farmers and contractors can monitor, analyse and optimise the condition and use of their machines. Mobile data transmission means you can check your realtime machine data anywhere – from the office PC, tablet or smartphone. You must have a Box (AGCO Connectivity Module) to use Fendt Connect. This exports relevant machine data and sends it to Fendt Connect (app or web application). Data is sent via the mobile network.

Flexible data transfer


Together we are stronger: That also applies to the Fendt IDEAL. If two or more Fendt IDEALs work closely together, the machines can exchange data such as waylines or machine settings via a secure mobile network connection, and therefore work even more efficiently in a group.

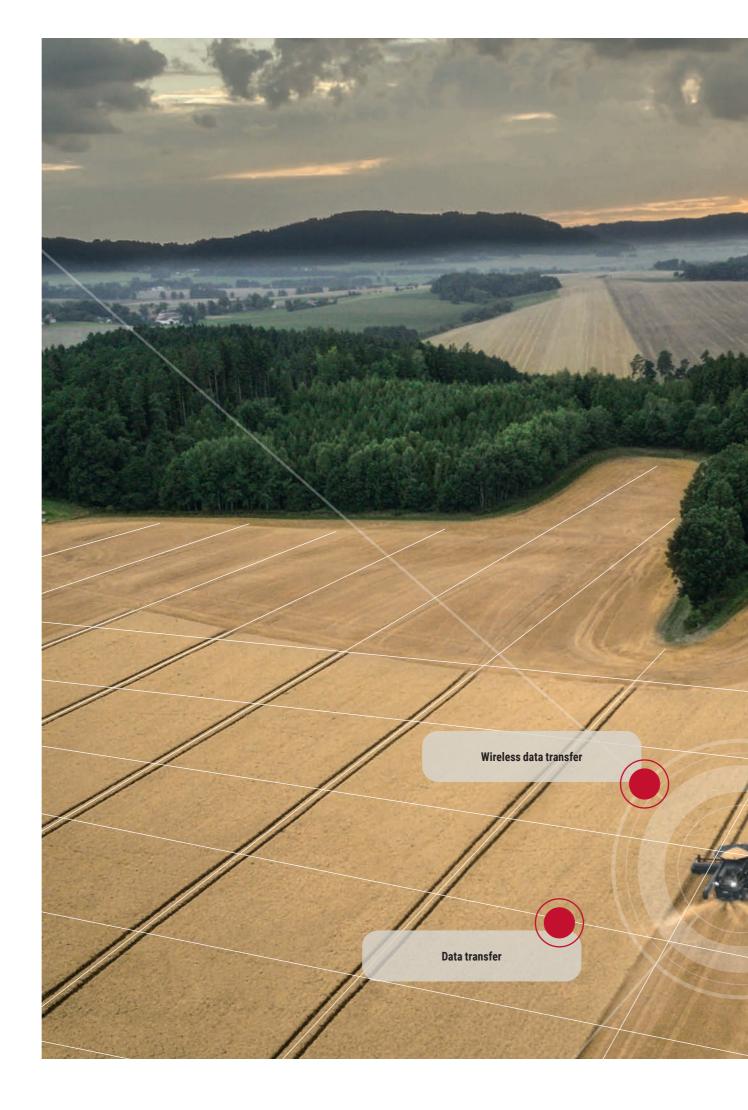



Whenever you buy a product or service with the Fuse logo, you can enjoy guaranteed open connectivity and compatibility within our core brand ranges as well as with other manufacturers' products. www.FuseSmartFarming.com Automatic section control

Minimise overlapping

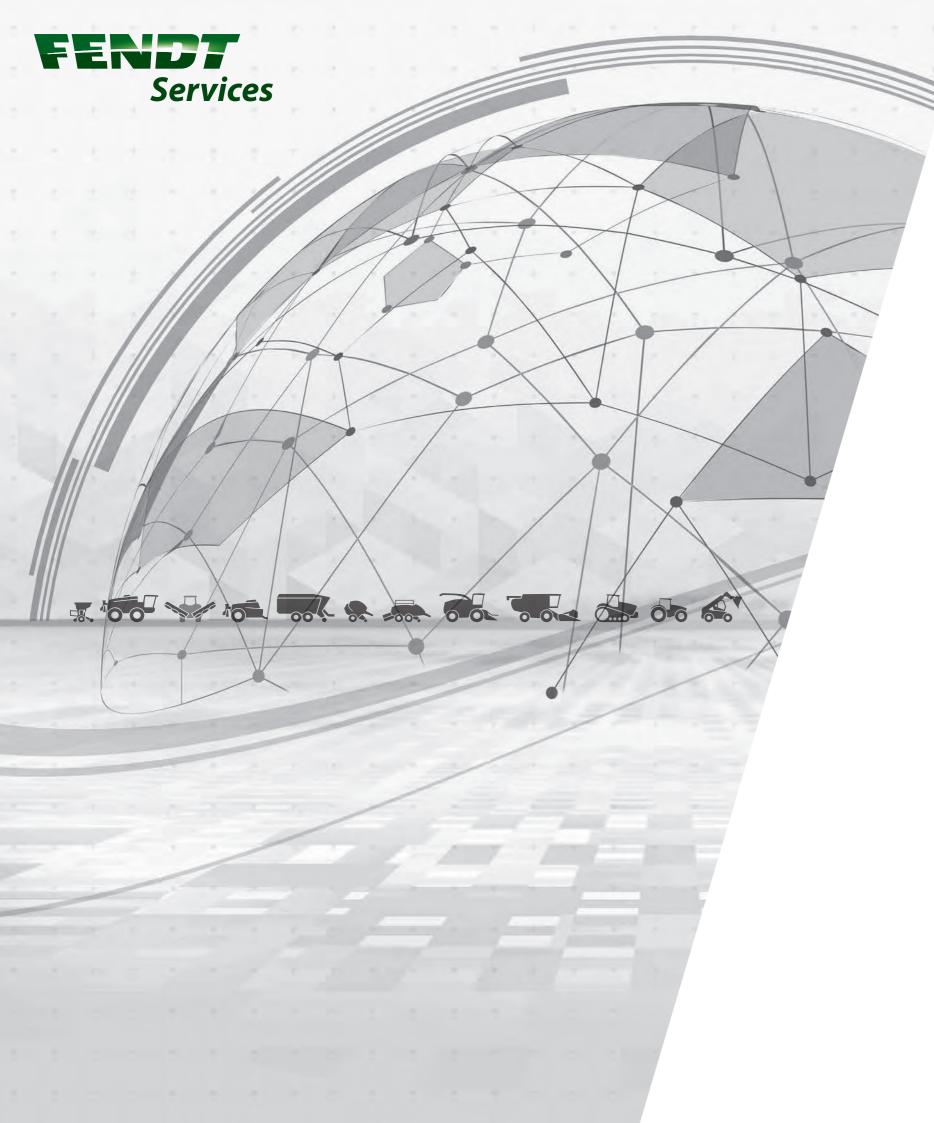

The best product with the best care and service.

With Fendt, you get a cutting edge product the overcome the toughest of challenges. That's expect that little bit extra when it comes to se highly-efficient, certified Fendt dealers:

- Fast lines of communication between you ar our trained service team.
- 24/7 availability of replacement parts throug the season
- 12-month warranty on Fendt original parts a their fitting





nat will	We offer outstanding services to offer you the best
why you can	possible reliability of use and efficiency from your
ervices from	Fendt Machine.
	Your Fendt dealers are always there when you need
	them, and have just one aim – to make sure your Fendt
and	machines are ready for action at any time.
ighout	To find your nearest dealer please visit the Fendt website
and	

Optional: 🗆

FENDT IDEAL

Technical specifications.

			IDEAL 7	IDEAL 8	IDEAL 9	IDEAL 10
Table						
Table widths PowerFlow f	rom - to**	m	7.70 - 10.70	9.20 - 12.20	10.70 - 12.20	10.70 - 12.20
TerraControl II™ table guid	ance					
Automatic reel speed						
Electric rape knife						
Multi-coupler						
Hydraulic reel drive					-	
Automatic reel position						
Crop elevator						
EHU (Eyeshot Hook Up)						
Ag Tag - automatic table r	ecognition					
Variable table drive	5					
HP - hydraulic cutting ang	e adjustment					
Intake chains		number	3	3	4	4
Hydraulic reverse						
Threshing system						
Single Helix threshing me	chanism					
Dual Helix threshing mech			-			
Rotors	unism	number	1	2	2	2
Rotor diameter			600	600	600	600
		mm	4838	4838	4838	4838
Rotor length		mm				
Rotor speed		rpm	400 - 920 / 280 - 1160	400 - 920 / 280 - 1160	280 - 1160	280 - 1160
Helix threshing mechanism		m²	0.83	1.66	1.66	1.66
Helix threshing mechanisi	n separation area	m²	1.44	1.92	2.40	2.88
Rotor feeder diameter		mm	600	600	600	600
Rotor feeder speed		rpm	285-656 / 200-828	285-656 / 200-828	200 - 828	200 - 828
Residual grain sepa	ration					
Total separation area		m²	2.27	3.58	4.06	4.54
Total Separation area			2.27	0.00	1.00	7.07
Cleaning						
Cyclone cleaning system						
IDEALbalance [™] - grain par	IS					
Preparation floor area		m²	2.05	2.05	2.05	2.05
Top sieve area		m²	2.71	2.71	2.98	2.98
Lower sieve area		m²	2.19	2.19	2.42	2.42
Total sieve area		m²	4.9	4.9	5.4	5.4
Fan speed		rpm	250 - 1400	250 - 1400	250 - 1400	250 - 1400
Electrical blower setting						
Double, ventilated steps				-		
Separate rethresher						
Electric sieve adjustment						
Returns indicator						
Grain tank						
Standard grain tank	As standard / Optional		Streamer 140 /	Streamer 140 /	Streamer 210 / -	-/-
ParaLevel grain tank	As standard / Optional		Streamer 210 Streamer 140 / -	Streamer 210 Streamer 140 / -	Streamer 140 / -	-/-
TrakRide grain tank	As standard / Optional		Streamer 140 / Streamer 210	Streamer 140 /	Streamer 210 / -	Streamer 210 / -
ScrollSwing control			Streamer 210	Streamer 210		-
	a rate adjustment					-
StreamerGates - discharge	rate aujustment		_			-
Interior lighting	fe entry					-
Ladder in grain tank for sa						
Flap and slide for taking s	•					
Grain tank discharge tube						
Grain tank discharge tube	•					•
Grain tank discharge tube						
Grain tank discharge tube	10.60 m - foldable					

Straw chopper BaseCu♦ - 56 serrated knives Chaff spreader Electrically adjustable deflector plates ActiveSpread radial spreader

Engine	
MAN engine	
AGCO Power Engine	
AirSense® cooling system	
Emission stage	Stage
Cylinders	number
Displacement	litres
Rated engine speed	rpm
Max. performance with PowerBoost (ECE R 120)	kW/hp
Fuel tank capacity	litres
AdBlue tank capacity	ntres
DriveCenter	
Air compressor	
Chassis	
MotionShift gearbox	
Gear steps	number
Max. driving speed*	km/h
AllDrive 4WD	
TrakRide crawler track**	
ParaLevel slope compensation	
Cab	
Vision cab	
IDEALdrive TM***	
Air-suspended driver seat	
Deluxe operator's seat	
Automatic climate control	
Electrically adjustable heated exterior mirrors	
Additional wide-angle mirror	
Additional work light	
Work light - full LED	
Radio	
Multimedia navigation	
Reversing camera	
360° camera system	
Loss indicator	
Adjustable steering column	
ProSound System	
PowerFold swingable entry ladder	
Fendt Variotronic	
Fendt Varioterminal 10.4"	
Fendt Dashboard	
SmartConnect [™] app	
HarvestPlus - automatic output control	
IDEALharvest [™] - machine optimisation	
Fendt VarioGuide	
Fendt VarioGuide NovAtel/Trimble	
Fendt VarioGuide pre-equipment	
Fendt VarioDoc	
Fendt VarioDoc Pro	
Fendt Connect	
Yield and moisture measurement	
Yield mapping	

Weights and dimensions Length without table

800/70R38 ParaLevel 580/85R42 Duals 710/70R42 Duals

···· j ····		
Length without table	m	
Width without table		
Height	m	
Tyres		
Transport widths		
TrakRide crawler track (26" - 660 mm)	mm	
TrakRide crawler track (30" - 760 mm)	mm	
TrakRide crawler track (36" - 914 mm)	mm	
TrakRide rice version (36" - 914 mm)	mm	
1000/55R32 Standard		
1000/55R32 ParaLevel		
900/60R38 Standard		
900/60R38 ParaLevel		
800/70R38 Standard		

IDEAL 7	IDEAL 8	IDEAL 9	IDEAL 10
			•
5 / V	5 / V	5 / V	5 / V
7	6	6	6
9.8	12.4	15.2	16.2
1900 336 / 451	1900 401/ 538	1900 483 / 647	1900 581 / 790
1000 / 1250	1000 / 1250 / 1500	1000 / 1250 / 1500	1000 / 1250 / 1500
180	180	180	180
2	2	2	2
40	40	40	40
	•		
_			
_	_	_	_
•	•		

9.13	9.13	10.63	10.63
3.29 - 3.89	3.29 - 3.89	3.29 - 3.89	3.29 - 3.79
3.99	3.99	3.99	3.99

3290	3290	3290	3290	
3490	3490	3490	3490	
3790	3790	3790	3790	
3790	3790	3790	3790	
3890	3890	3890	-	
3890	3890	3890	-	
3790	3790	3790		
3790	3790	3790		
3290 / 3490	3290 / 3490	3290 / 3490	-	
3490	3490	3490	+	
5160				
5500				



It's Fendt. Because we understand Agriculture.



www.fendt.com/za/

AGCO South Africa Marketing 16 Pomona Road, Pomona Kempton Park, Gauteng, 1619



Fendt is a worldwide brand of AGCO. All details regarding scope of delivery, appearance, performance, dimensions and weights, fuel consumption and running costs of vehicles reflect the latest information available at the time of print. These may change by the time of purchase. Your Fendt dealer will be happy to inform you about any changes. The vehicles shown do not feature country-specific equipment.